



Revolabs FLX Analog User Guide

- Handset call:** Remove the dialer from the charger, leave microphones in the charger. Ensure that the microphone status on the screen of the handset is "off" (grey) for all microphones. Dial the number, and press the  key.
- Conference call:** Remove at least one microphone from the charger. Dialer and speaker are optional to be removed from the charger. Dial the number, and press the  key.
- Switch between conference and handset call:** At least one microphone must be out of the charger. Press the left soft-key labeled "Handset" or "Speaker" to switch between the two modes.
- Use of components in charger tray:** The dialer and speaker work and are active in the charger tray. To enable the microphones in the charger tray, press the multi-function button on the microphone to turn it on. Microphones in the charger tray always start muted, and stay muted unless an active call is taking place. During the call, you can mute and unmute the microphone by pressing the button.

Microphone LED:

- Blinking green: microphone unmuted
- Blinking red: microphone muted
- Blinking red / orange / green: microphone connecting to base station






After finishing a call, return the microphones, speaker, and dialer back to the charger base!


Revolabs FLX Analog User Guide

Microphone status:
green—unmuted
red—muted
grey—off
yellow—unknown

Speaker status:
green — available
grey—off
yellow—unknown

To start a local conference call:
 Dial the first number, press 
 Once the call is established, press 
 again
 Now dial the second number
 Once that call is established, press 
 to conference the two calls together

During call:
 Start active call menu



Handset battery status

Volume up

Volume down

End call

Make call / hook flash

Active Call Menu

Hold — put caller on hold

Conference — start a conference call, dial second number, or use recent calls / contacts

Device Status — Information about components and status

Audio Controls — Change Volume, Equalizer, or Audio mixer setting

System Info — System information

Return Select

After finishing a call, return the microphones, speaker, and dialer back to the charger base!